


Installation instruction Elektronikbox, Ver. C


1. Read Manual




2. Required tools

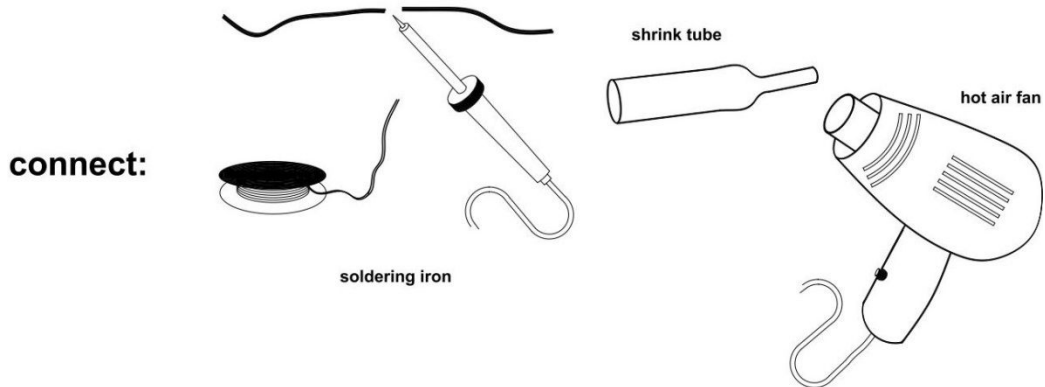



3. Place C Box Rear, C Box Front and the handlebar adaptor

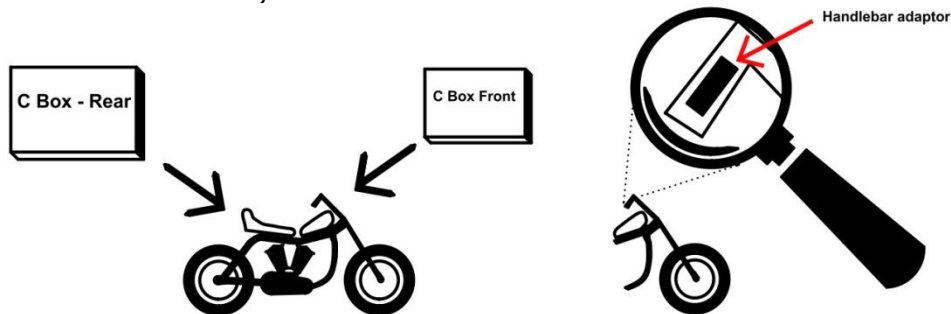


4. Connect C-Boxes and handlebar adaptor

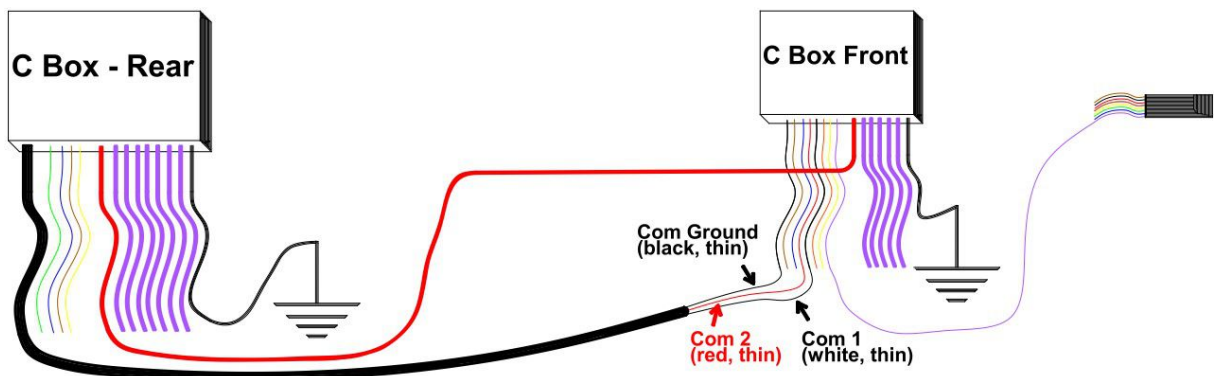


5. Connect electrical loads

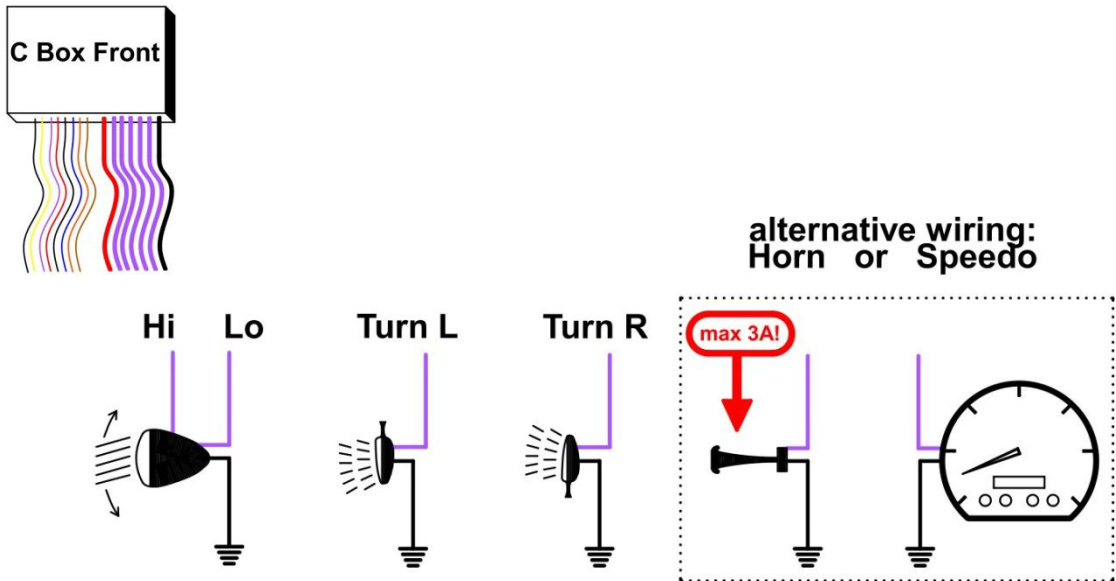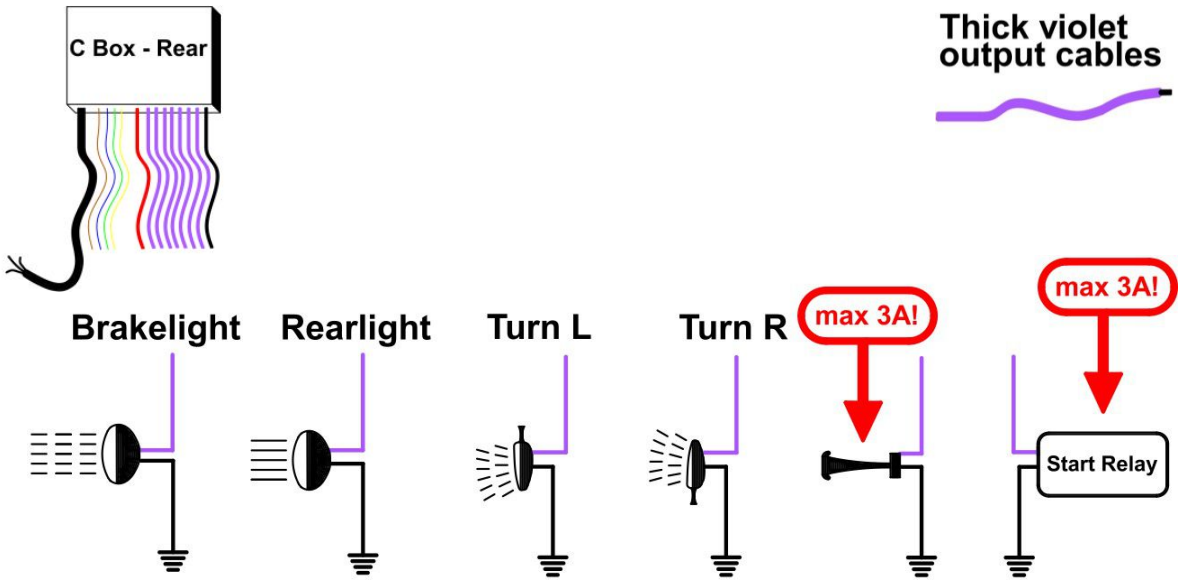


5. Connect buttons

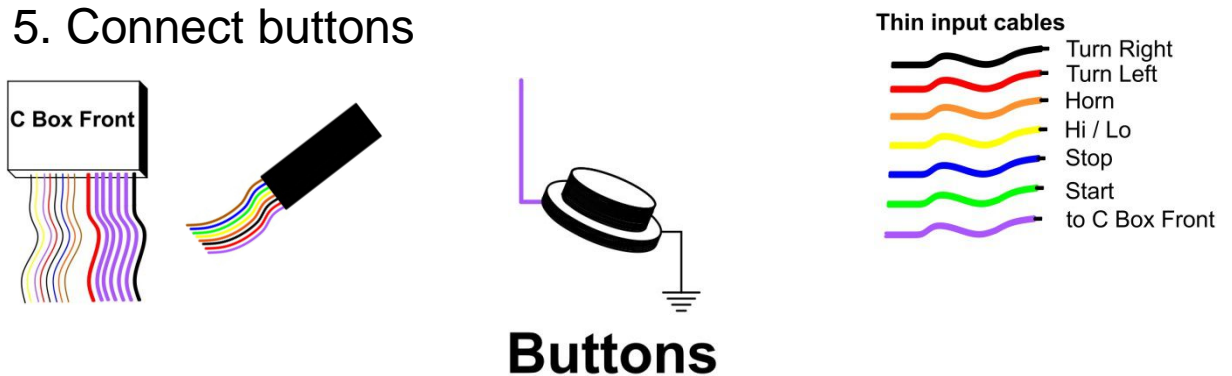

6. Connect power

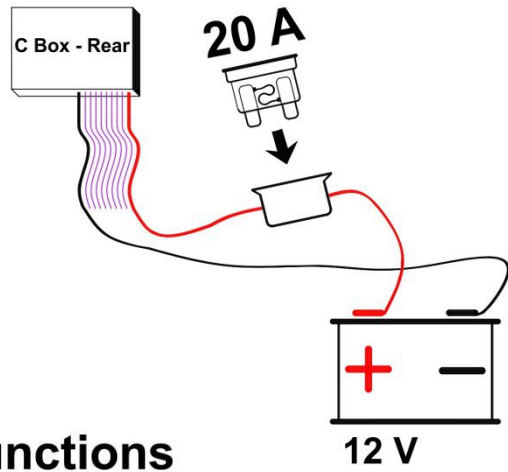


Check functions

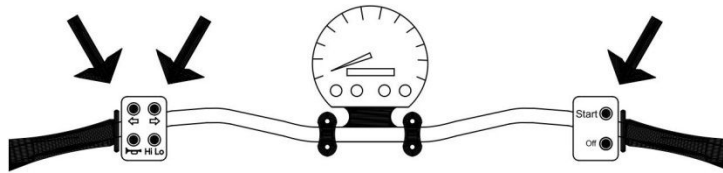

7. Program menu

1. Press & hold "Horn" button
2. Ignition
3. Release "Horn" button
4. You're in program Menu!
See program options in manual.
5. Step through program menu
by pressing turn-buttons
6. **Important:**
You must step through all 6 menu items,
before any selection is saved!

Flashing quantity:	Mode:	Turn left push button:	Turn right push button:	Description:
1 x	Show flasher	On	Off	2 flashes at starting and stopping
2 x	Auto off flasher	On	Off	Flashers turns off autonomously after 20 or 40 flashes
3 x	Auto off flasher	40 x	20 x	Adjustment of flash quantity before turn off, if auto off activated.
4 x	Start / Stop-push button	1 push button f. Start / Stop	2 push buttons f. Start / Stop	Using 1 push button for both (start/stop) or 2 separate buttons.
5 x	Sidestand / Idle running switch	Switch activated	Switch not activated	Ignition and starter only active if the switches are connected to ground.
6 x	Horn output at handlebar active	Output is permanently on (for Speedo-use)	Output is switchable via push-button (for Horn-use)	This output is usable for the horn or the speedo (either-or).

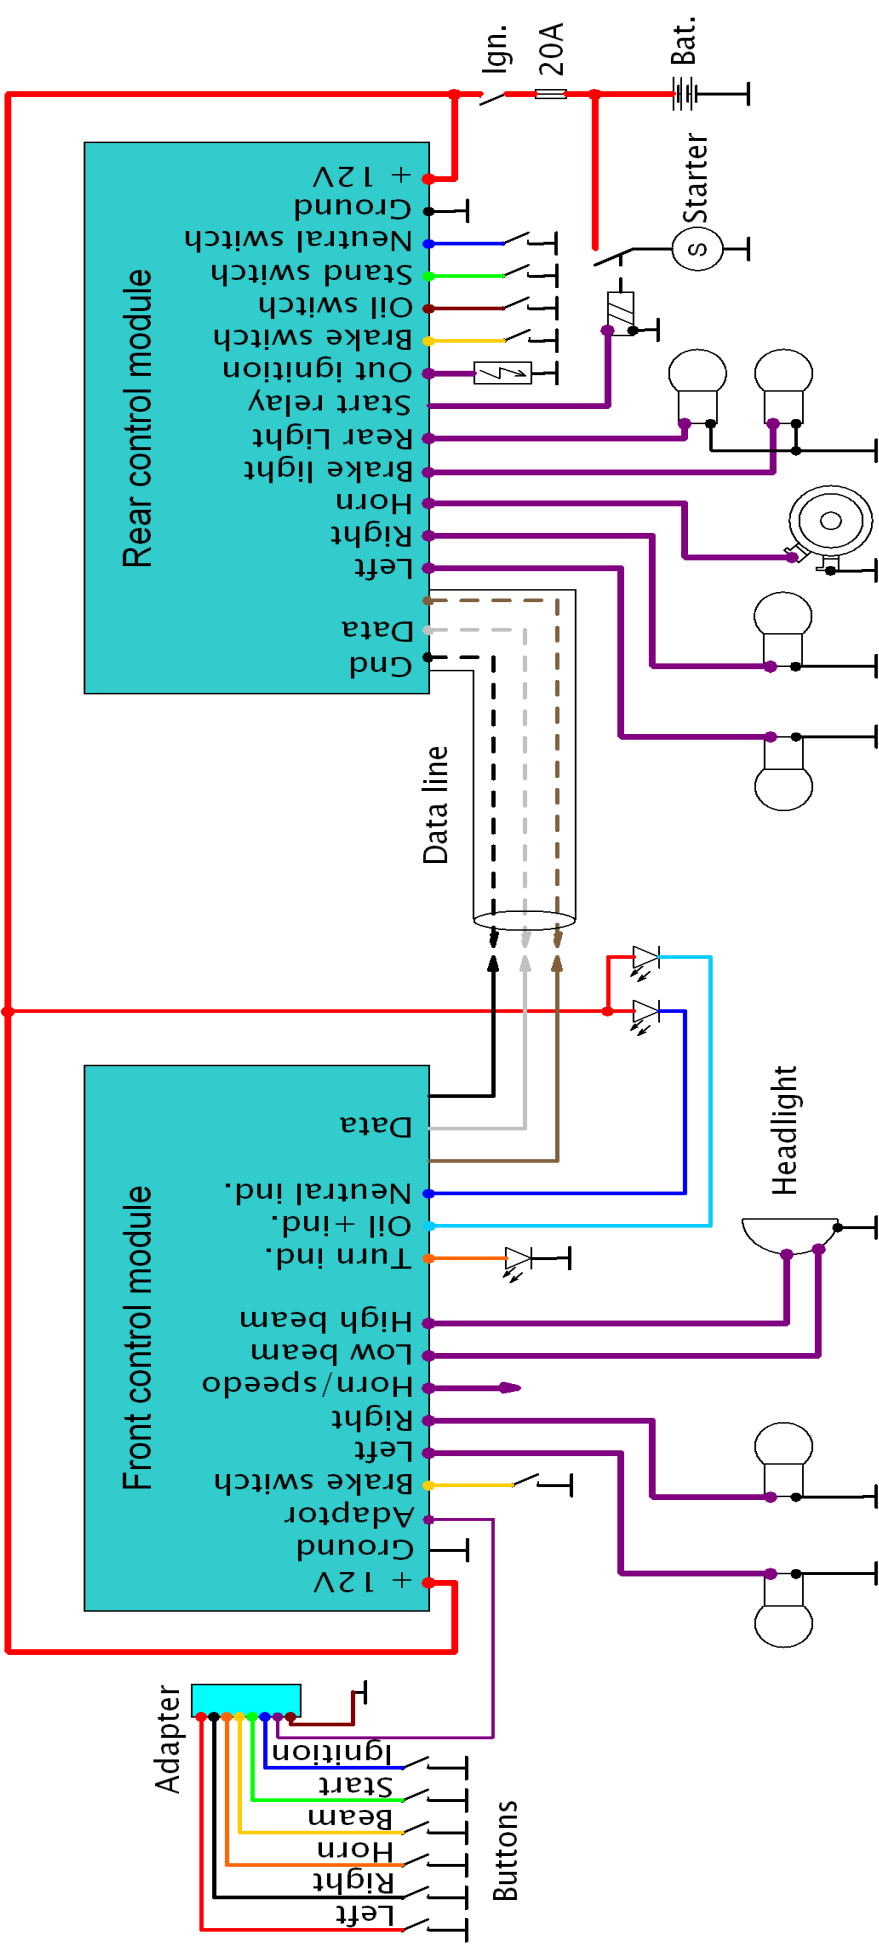

Connect all ground cables to the minus pole of the battery !