


Installation instruction Elektronikbox, Ver. C BS


1. Read Manual




2. Required tools

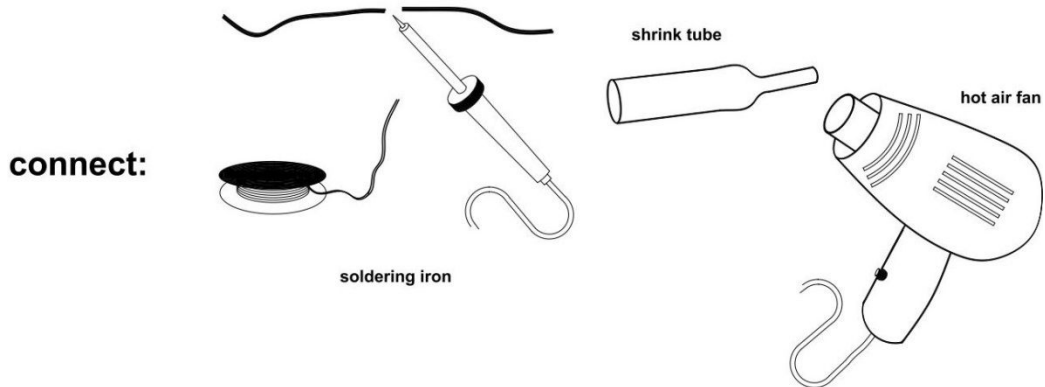



3. Place C Box Rear, C Box Front and the handlebar adaptor

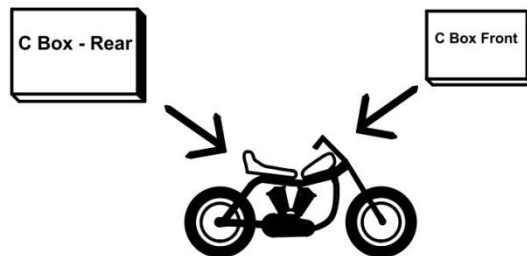


4. Connect C-Boxes

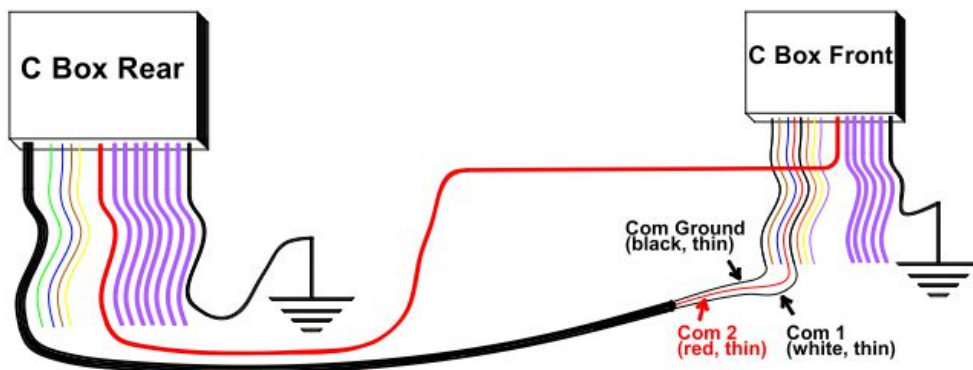


5. Connect electrical loads & control LEDs

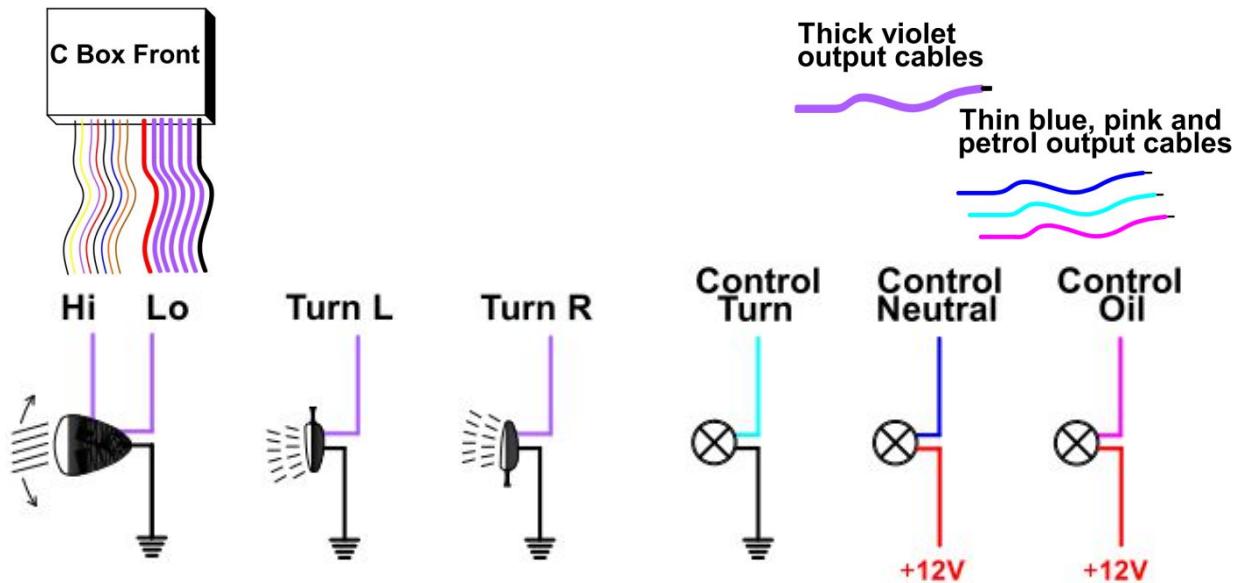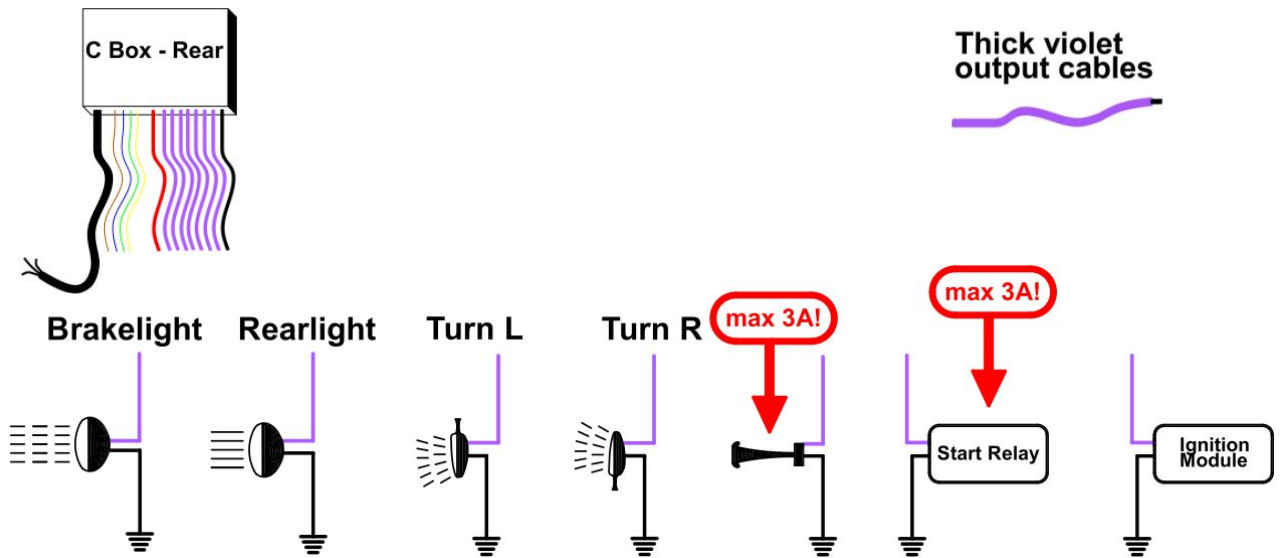


5. Connect buttons or switches

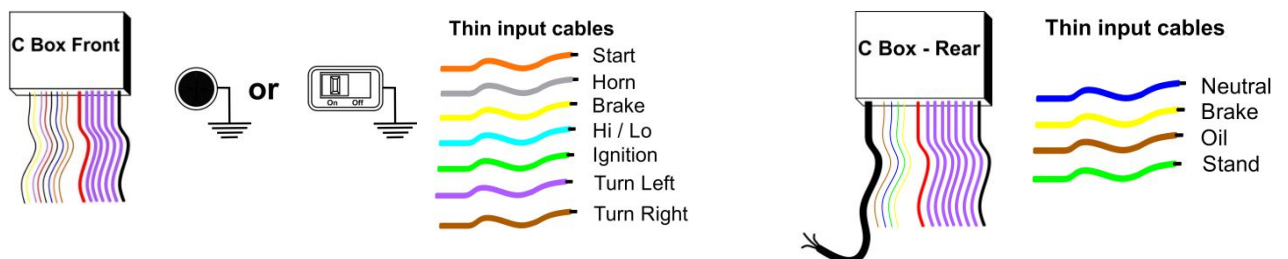

6. Connect power

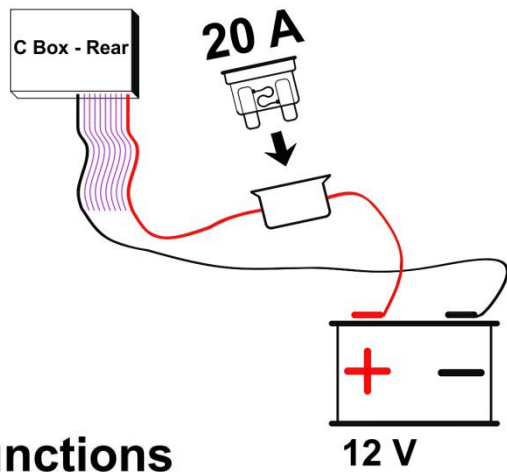


Check functions

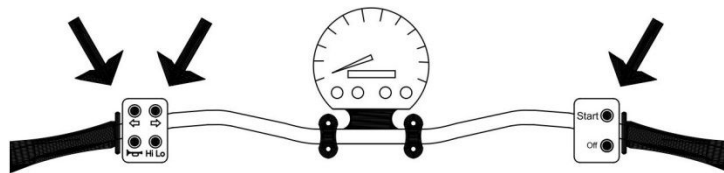

7. Program menu

1. Press & hold "Horn" button
2. Ignition
3. Release "Horn" button
4. You're in program Menu!
See program options in manual.
5. Step through program menu
by pressing turn-buttons
6. **Important:**
You must step through all 8 menu items,
before any selection is saved!

Flashing quantity:	Mode:	Turn left push button:	Turn right push button:	Description:
1 x	Show flasher	Off	On	2 flashes at starting and stopping
2 x	Auto off flasher	Off	On	Flashers turns off autonomously after 30 or 60 flashes
3 x	Auto off flasher	30 x	60 x	Adjustment of flash quantity before turn off, if auto off activated.
4 x	Stand / Neutral-switch	Switch activated	Switch not activated	Ignition and starter only active if the switches are connected to ground.
5 x	Start / Stop-push button	1 push button f. Start / Stop	2 push buttons f. Start / Stop	Using 1 push button for both (start/stop) or 2 separate buttons.
6 x	Light switch / light push-button	Light switch	Light push-button	This input can be used for switches or push-buttons.
7 x	Turn switches / Turn push-buttons	Turn switch	Turn push-button	This input can be used for switches or push-buttons.
8 x	Engine off switch or push button	Engine off switch	Engine off push-button	This input can be used for switches or push-buttons.

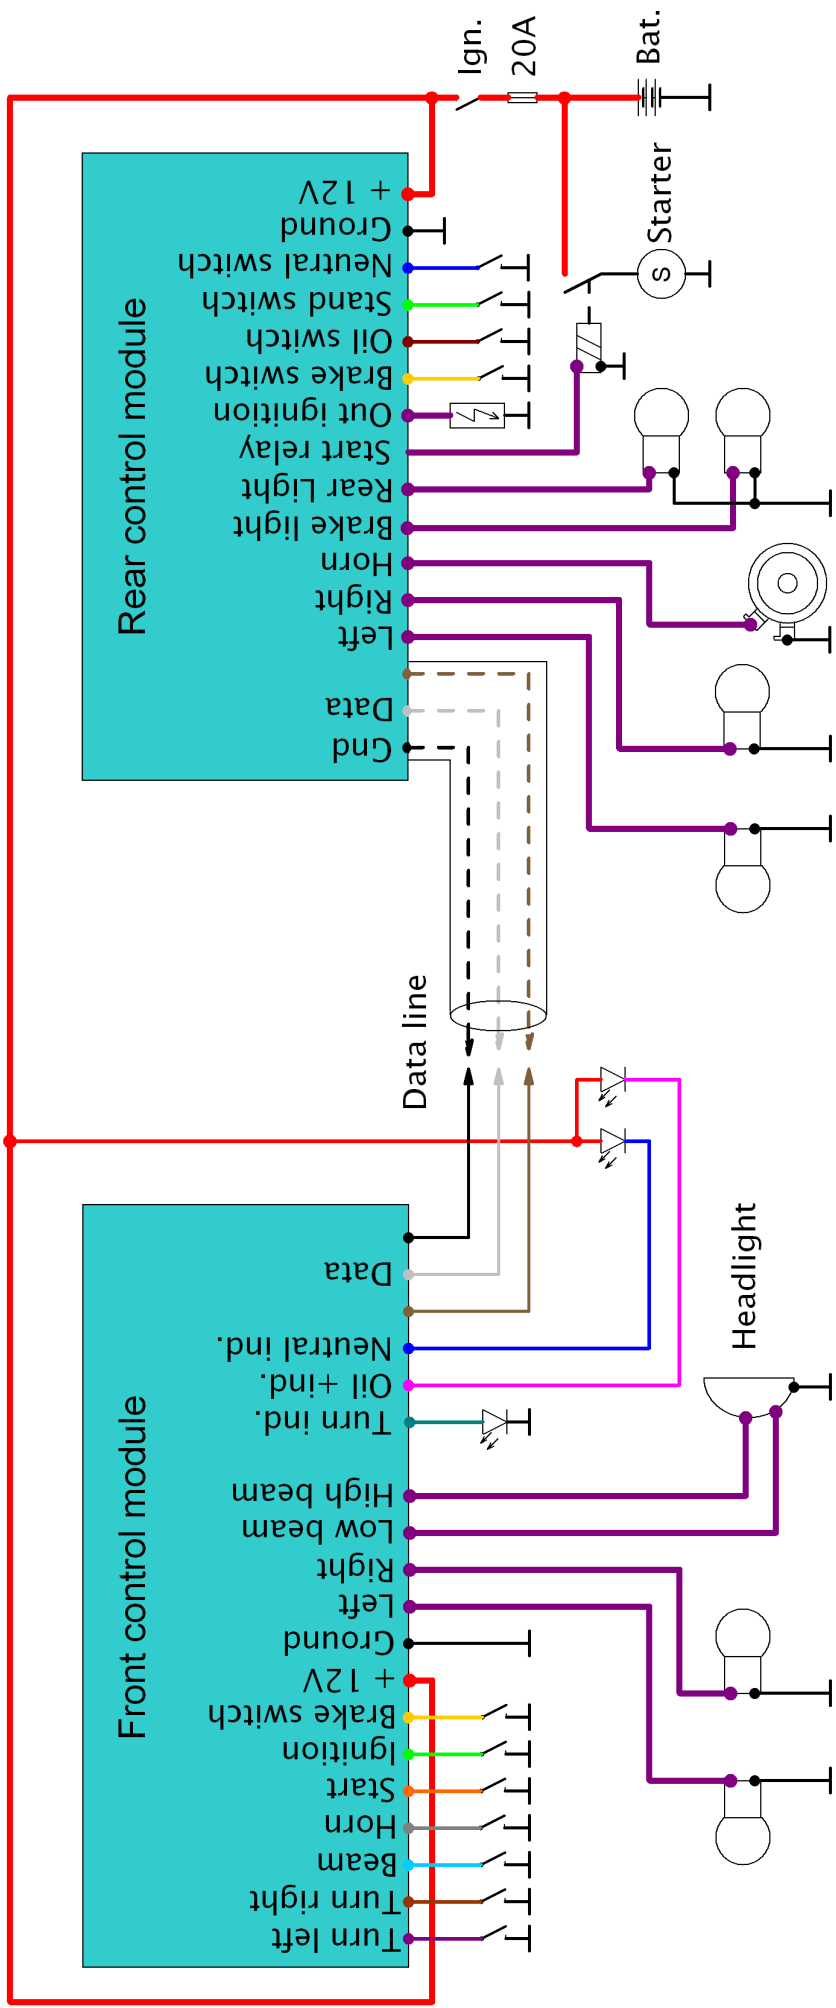

Connect all ground cables to the minus pole of the battery !